


NEW DESIGN "B"

NEW DESIGN "A"

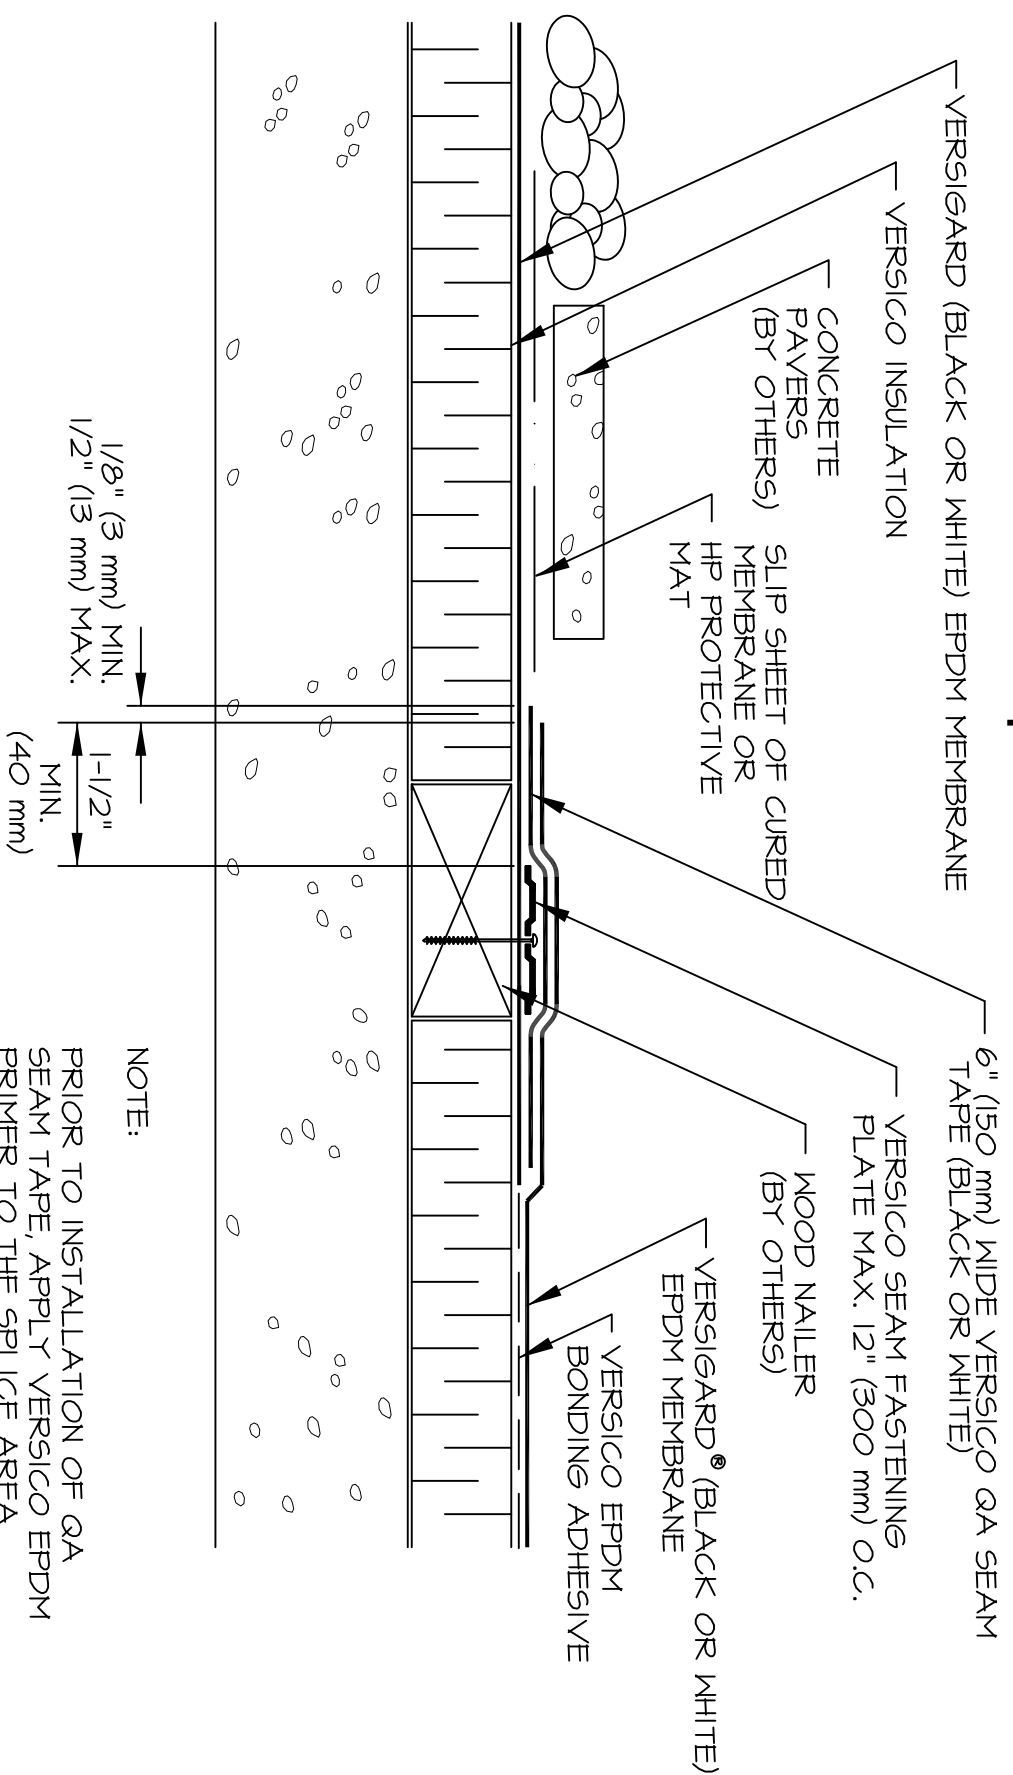

NOTE:
 PRIOR TO INSTALLATION OF QA SEAM TAPE, APPLY VERSICO EPDM PRIMER TO THE SPLICE AREA.

C-10.1

NEW VERSICO DESIGN "B" AND DESIGN "A"

