


Versico Incorporated

VersiWeld™ PURLIN ATTACHED ROOFING SYSTEM

MECHANICALLY-ATTACHED OPTION

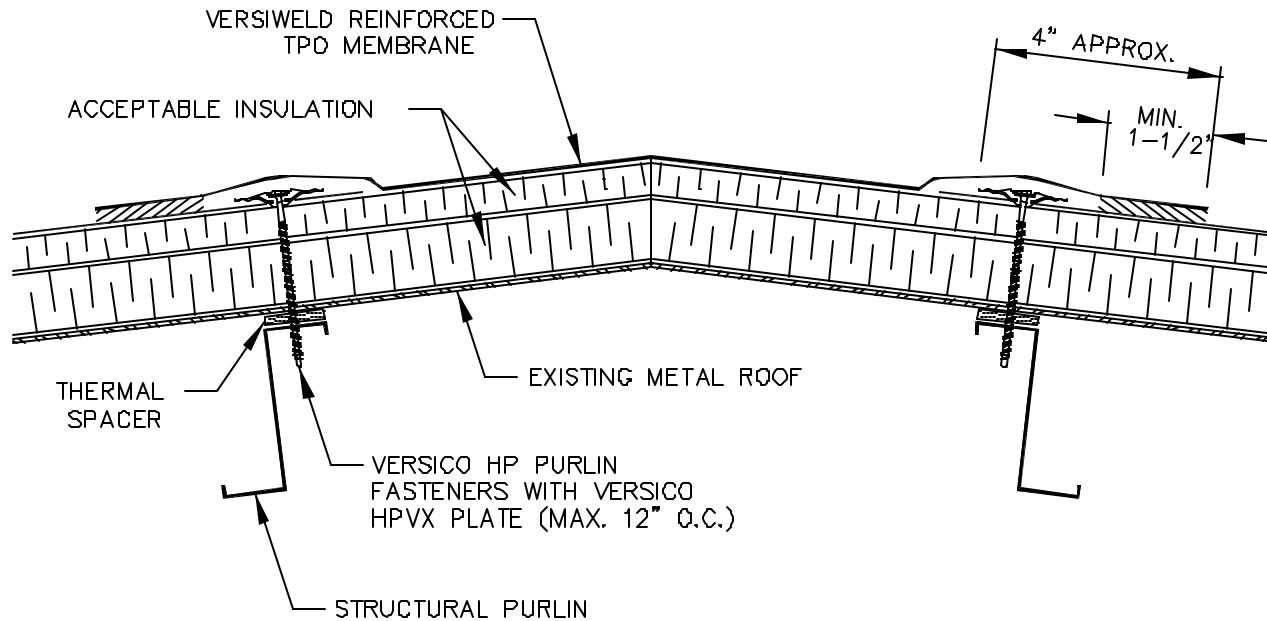

NOTES:

1. MEMBRANE SHALL BE FASTENED INTO THE PURLINS ADJACENT TO THE ROOF RIDGE.
2. FOR PROPER MEMBRANE ATTACHMENT AND SEAMING, REFER TO DETAIL VWMA-2.1.
3. HP PURLIN FASTENERS MUST PENETRATE THE PURLIN A MINIMUM OF 1 INCH.

RIDGE MEMBRANE ATTACHMENT

VW/PA-22